



SeaBat Updater

The SeaBat Updater FW/SW install package is provided on the USB key that's delivered with your Teledyne RESON SeaBat system.





Installation

- Plug in the USB key, and select the USB in Windows Explorer (if not automatically opened by the system).
- Open the folder Software Installers > System Installer.
- Double-click the *SeaBatUpdater.exe* file.
- Drag and drop the zip file *FW_SW...vx.x.zip* in the Teledyne RESON SeaBat Updater window.
Alternatively, click on the browse button to select the file in Windows Explorer.
- Wait for the release notes to be retrieved and displayed in the Release notes section.

- To add sonar processor name or IP address:

- Click the browse button to get a list of computers. If the sonar processor is not displayed, use "View entire network" by selecting the check box.
- Or click the Edit button to enter the sonar processor name or IP address.


The sonar processor name is SN+serial number, which can be found on the front of the sonar processor: SNxxxxxxxxxx.

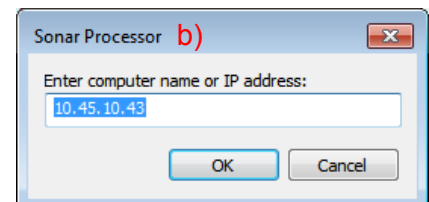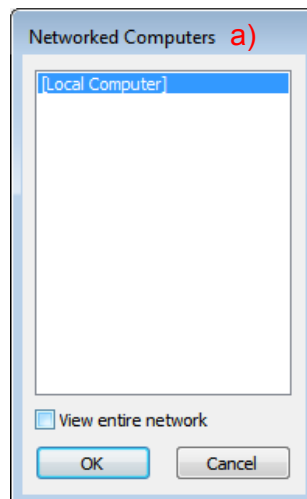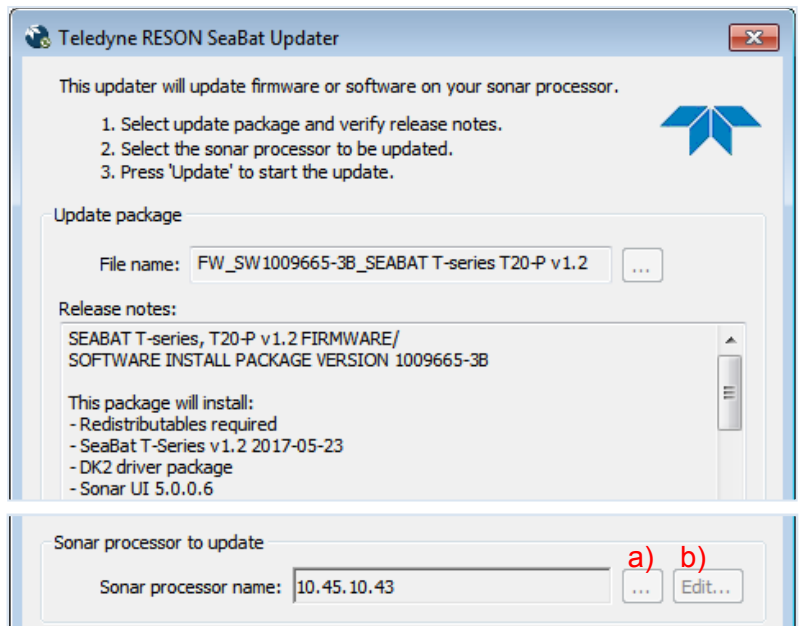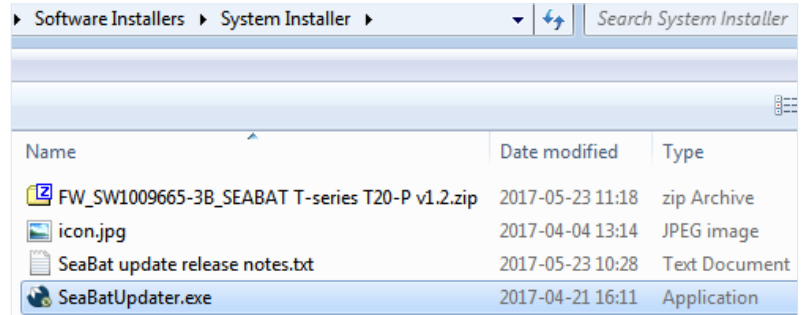


- Click Update to start the installation.




The lower progress bar will show the progress of items relatively more time consuming to install.

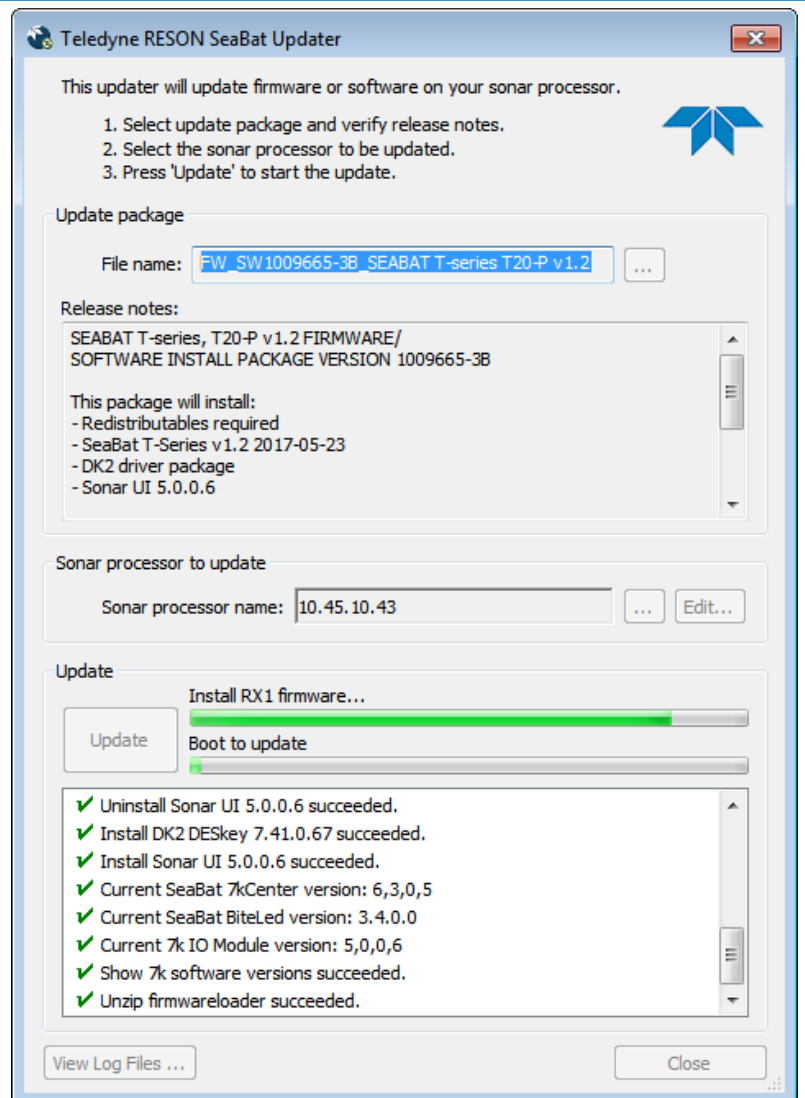

- Once the sonar processor has been updated, it is automatically restarted.

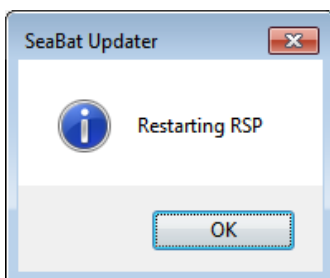

- Click OK, and then close the SeaBat Updater.
- Your system is ready for operation.

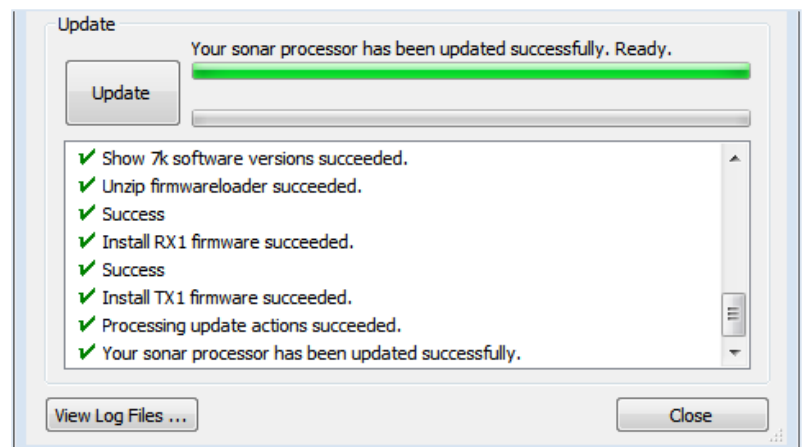

Teledyne RESON reserves the right to change the content of this document without notice. Teledyne RESON makes no warranty of any kind with regard to this material, and shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material. © 2017 Teledyne RESON A/S